



---

## Mounting of filters

---

Mounting and installation of  
filters for FL 1500 C DMX, F, XT


# RobLight

## Mounting instruction

Applies to:	Item nr.
CTC Filter -1000K Ø28	0126 1019
CTC Filter -1200K Ø28	0126 1020
CTC Filter -900K Ø28	0126 2021
CTC Filter +2000K Ø28	0126 2022
CTC Filter +1000K Ø28	0126 2023



1. Unscrew the front part from the light generator. Do the work in a dry clean environment.

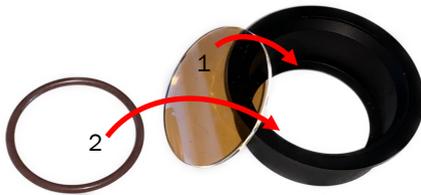

2. Assemble the filter and bracket. Dont touch the dichroic glass surfaces.

# RobLight



3. Mount the assembled filter in the detached front part.



4. Screw the front part on to the light generator.

# RobLight

If problems are not solved using this guide, please contact RobLight A/S.

# RobLight

RobLight A/S, Gl. Skagensvej 105 H, DK-9900 Frederikshavn  
T: +45 9244 4888, E: [info@rob-light.com](mailto:info@rob-light.com)  
[www.rob-light.com](http://www.rob-light.com)

RobLight accepts no responsibility for possible errors in catalogues, brochures and other printed material.  
RobLight reserves the right to alter or discontinue its products without notice. © 2019 RobLight A/S

99082176\_23-11-2020\_Rev. 1.0