

RobLight



Ara 3 F



Ara 3 M

Ara 3 Series

User manual

Product overview/unboxing

1 Ara 3
1 User manual

Applies to :

1141 3110	Ara 3 F 3000K-G1 black
1141 3120	Ara 3 F 3000K-G1 grey
1141 3130	Ara 3 F 3000K-G1 white
1147 3110	Ara 3 M 3000K-G1 black
1147 3120	Ara 3 M 3000K-G1 grey
1147 3130	Ara 3 M 3000K-G1 white
1141 3111	Ara 3 F 3000K-G2 black
1141 3121	Ara 3 F 3000K-G2 grey
1141 3131	Ara 3 F 3000K-G2 white
1147 3111	Ara 3 M 3000K-G2 black
1147 3121	Ara 3 M 3000K-G2 grey
1147 3131	Ara 3 M 3000K-G2 white

Installation instructions

Follow the installation instructions to ensure

- Safe operation
- Full functionality
- Stated expected lifetime
- Uninterrupted illumination

Technical data

General

Material	Aluminium
Dimensions (L x H x W)	Ø50 x 33 mm
Dist. between driver and LED	2m standard, other lengths on request
Weight (total)	80 g
Safety	CE, RoHS, WEEE
Electrical topology	Serial connection

Environmental

Protection rating	IP20
Cooling	Natural convection
Ambient temperature	40°C

Driver/electrical

Driver	LED driver constant current
Driver size (L x H x W)	Depends on driver solution (see accessories)
Supply voltage (mains)	100-240V 50-60 Hz
Driver expected lifetime	>50000h
Dimmer systems applicable	1-10V, PUSH (mains)
LED current	500 ma DC (±5%)
Total power consumption	2.4W

Light source

Applied LED	Cree
LED expected lifetime	>50000h @ Ta=25°C
Typical CCT	3000K, other CCT on request
Typical Ra (CRI _{1,8})	90

RobLight

Surface mounting

Ara 3F:



Make a $\varnothing 10$ mm hole



Install Ara and tighten the nut on the backside.

Ara 3M:



Place the Ara 3 M on a steel plate, if required, make a hole for the wire.





Connect driver.
Driver with multiple connections use jumper if not in use



Connect main power
(100-240V)

RobLight

Lens mounting

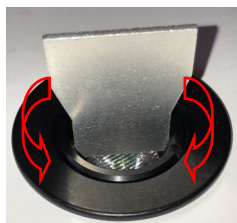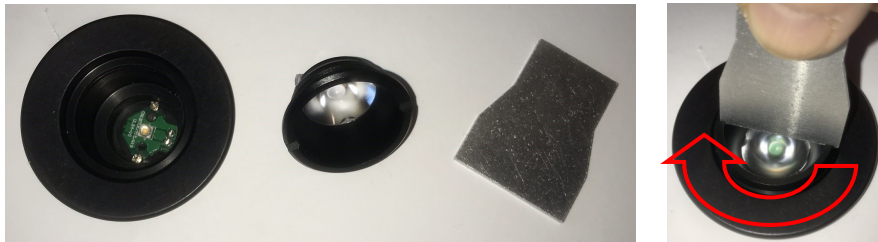

Easily mount the lens by screwing it into the fitting

When adjusting the 48°/8° lens use the narrow end of lens tool A (accessories)


Dont touch the lens surface.

Installing accessories

You can mount a film filter using filter clip A (accessories).

Dimension : Ø28*0.4 mm (Max thickness 1.5 mm)

To ensure the most durable solution only use filters from recognized suppliers. (Lee, Rosco, etc)

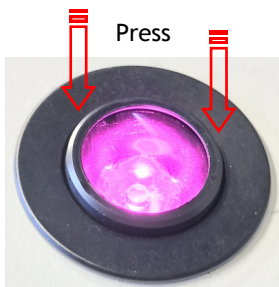

Place the filter in the holder and press the holder onto the lens

NB. The film technology is not a durable solution and will fade.

Accessories

	Part name	Description	Ordering
	Lens A 10° black Lens A 10° grey Lens A 10° white	Spot 10	1148 0100 1148 0105 1148 0106
	Lens A 20° black Lens A 20° grey Lens A 20° white	Narrow 20	1148 0300 1148 0305 1148 0306
	Lens A 30° black Lens A 30° grey Lens A 30° white	Medium 30	1148 0500 1148 0505 1148 0506
	Lens A 48°/8° black Lens A 48°/8° grey Lens A 48°/8° white	Oval 48/8	1148 0400 1148 0405 1148 0406
	Lens tool A	For mounting/removing lenses	1148 0007
	Filter clip A black	Mounting ring for colour filters	1148 0006
	Driver set 2A 3W	700 mA. Plug-and-play LED driver 1-2 connections	1148 0001
	Driver set 2A 15W	700 mA. Plug-and-play LED driver 4-8 connections 1-10 V dimming	1148 0002
	Filter	Colour filter Ø28*0,4 mm	On request
	Ara snoot 50 mm black		1148 8016
	Barn doors Ara black		1148 8012
	Ara extension rod 100 mm black	Only for Ara 3 F	1148 8017

RobLight

Application notes

The light generator is an electronic device and must be handled accordingly. The different components will have different factors influencing the practical lifetime. The most important factor for this system is the condition of the surrounding air (temperature and cleanliness). The data we have stated about or and the expected lifetime of the key components, are at the temperatures that the suppliers have performed during their standardized tests in clean environments.

The light generator is designed to run at max ambient temperature, but the longest usable operation is achieved with lower temperatures.

Although there is thermal protection built into this device, it is only a safety device and should not be used as a measurement device to test if the light generator is running at a tolerable surrounding temperature.

The polyconnector is the most stressed part of this system. Care should be taken to ensure that the fibre ends are 100% clean and free from dust and grease (fingerprint will do damage.). See www.rob-light.com for recommendations to clean fibre ends.

Running the light generator at too high temperatures will not only risk damage to the light source but also to the fibre harness.

KEEP COOL

CLEAN AIR

Maintenance, spare parts & repairs

The cooling for this device is dependant that the metal surface is clean and free from dust. The product can be cleaned with a soft brush or low pressure cleaned and dry compressed air. If a vacuum cleaner is applied arrangements to remove static electricity must be done.

The lens can be changed as shown in this manual. Take care not to damage or soil the lenses when handling/cleaning. Take care not to touch the LED when the product is open.

This product is not supposed to be otherwise serviced, if it is used as recommended.

If the product isn't performing as specified, use the troubleshooting guide. If you need further assistance please contact our office.

If needed the Led module can be changed by a trained technician.

Phone: +45 9244 4888

E-mail: info@rob-light.com

Troubleshooting

Problem	Trace the problem	Solution
No light	Check the power	Connect the power cord properly and turn on the device
	Check the wiring	Unplug the main. Check connectors on the connections tree is attached to a product or a jumper. Turn on the power
	Check the dimming	Unplug the main. Unplug the dimmer system from the driver. Turn on the power
Light output has diminished	Check if the light has been dimmed via a dimmer?	Increase brightness to the normal level
	Check the operating conditions of the light engine	If the light engine has been running at elevated temperatures for an extended time, a decrease in the output will be observed

RobLight

RobLight A/S, Gl. Skagensvej 105 H, DK-9900 Frederikshavn
 T: +45 9244 4888, E: info@rob-light.com
www.rob-light.com